



Kitchen Geeks®

ELECTRIC GRINDER SET KGPG-00001



USER MANUAL

Important Safety Information Inside!

Read all instructions before using.


Use only as directed.

<https://KitchenGeeks.com>

When using electrical appliances, basic safety precautions should always be followed including the following:

- Do not put the appliance in water or any other liquid, this may cause personal injury and/or flammable fumes.
- To protect against fire, do not operate the unit in the presence of hazardous materials and/or extreme temperatures.
- This product is intended for normal domestic household use only. Do not use the grinder for anything other than for its intended use.
- For indoor use only. Do not expose this product to rain or other extreme conditions.
- Never force the grinder to tighten or twist it or attempt to speed up the mechanism.
- Do not attempt to disassemble the product by yourself, otherwise warranty will be invalid.
- When recharging the electric grinder keep your workspace free from potential hazards.
- The product is designed for grinding pepper and salt only, please do not use it for other purposes.
- Keep the grinder out of the reach of children.

PRODUCT DESCRIPTION

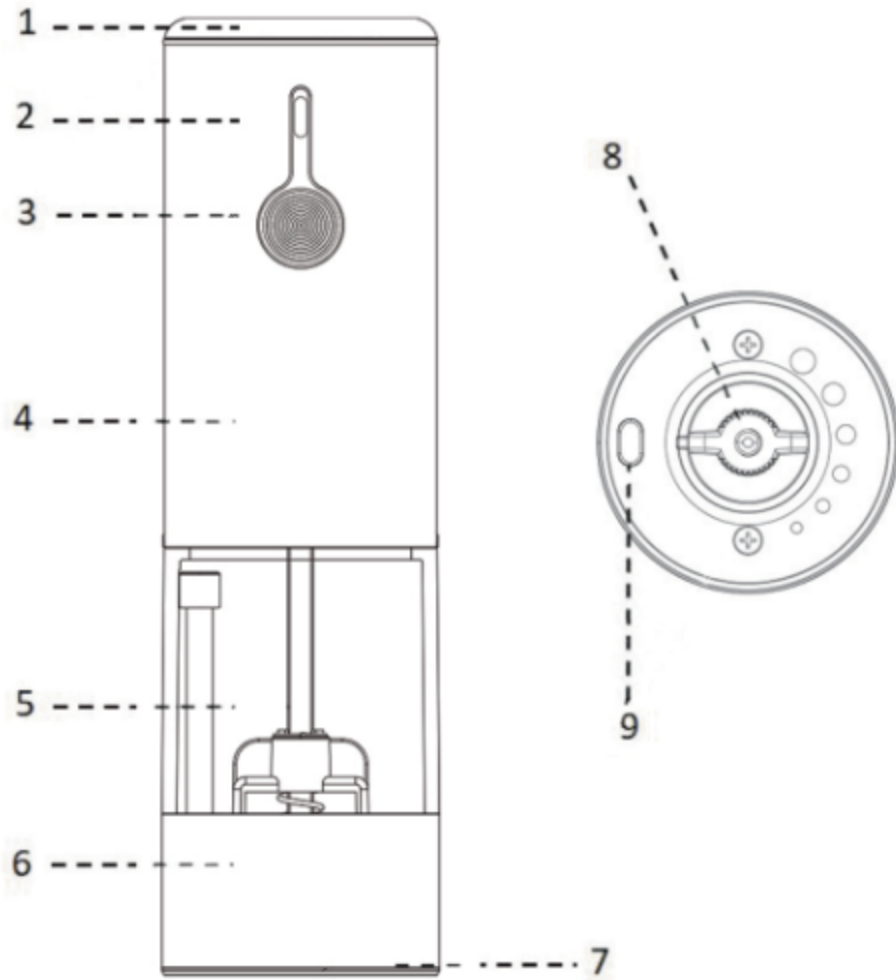

1. Charging Port
2. LED Indicator
3. On/Off Button
4. Upper Body
5. Container

6. Lower Body
7. Dust Cover
8. Adjuster
9. Light

RECHARGING YOUR GRINDER

Before using your grinder for the first time, we recommend that you charge it for 1 hour. Please follow instructions for recharging below:

- Gently push the top cover from the front to the rear to open the charging port;
 - Place your grinder on the flat table and ensure that it's firmly in an upright position;
 - Plug one end of the USB cable into the charging port and the other end into a USB Type A receptacle. Confirm that it is fully engaged with the recharging connections;
 - When your grinder is in charging, the white LED will light up and blink slowly. After fully charged, the LED will stop blinking.
- *If the LED flashes quickly, it means the battery almost used up. The charging procedure should be carried out immediately.
- *The grinder can still work for about 1 minute when the LED flashes.
- *Please charge the battery to 50%-80% capacity every 3 months if you do not use it for a long time.



HOW TO USE


Rotate and open the container according to the indication icons




Fill salt or pepper into container, connect and lock the upper and lower bodies rotate in reverse.



Remove the cover and rotate the adjuster to adjust the grinding coarseness according to personal needs.

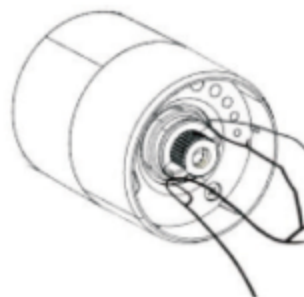

Press the button and the grinder will start working.
Release the button and the grinder stops working.

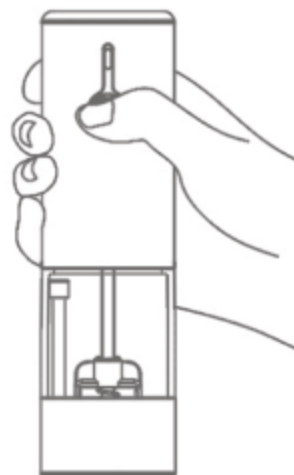

TROUBLE SHOOTING

If the grinder does not work or stops during the grinding process, please confirm if there is sufficient battery power left.

If the LED is always on when the button is pressed, and the grinder still does not work normally, please contact us at KitchenGeeks.com for help.

PARAMETERS

Product Dimensions	192*54mm
Product Weight	320±10g
Battery Type	500mAh Lithium battery
Battery Life	Grind pepper for 15 min when fully charged
Charging Input	5V 1A
Charging Time	70 minutes
Container Capacity	66g
Unload Noise	<65dB

Question 1: How do I charge them?

Answer 1: With the on/off button and our logo facing you, gently slide the top silver cap away from you. The cap will move slightly and lock in position to expose the USB-C port. There are two (2) cables included and you should charge both of them before using the first time for 1 hour each. To hide the charging port, simply slide it gently again toward the on/off button.

Question 2: How do I fill up the grinder with salt or pepper?

Answer 2: Hold the grinder in one hand where the on/off button is located, use another hand to rotate the bottom (clear area) gently, and then the top and bottom should come apart easily. After filling the grinder the top and bottom pieces go back together the same way, but rotate in reverse of opening it. The instruction manual included with the set has a graphic image for further help.

Question 3: How do I adjust the grind coarseness?

Answer 3: If the cap is still on the bottom of the grinder, then please remove it. You will now be able to see the dial that allows you to control the grind. Do not attempt to over tighten or over loosen or it will break.

Question 4: How do I register my salt & pepper grinders for my warranty?

Answer 4: <https://kitchengeeks.com/product-registration>